


HANDBOOK OF INSTRUCTIONS

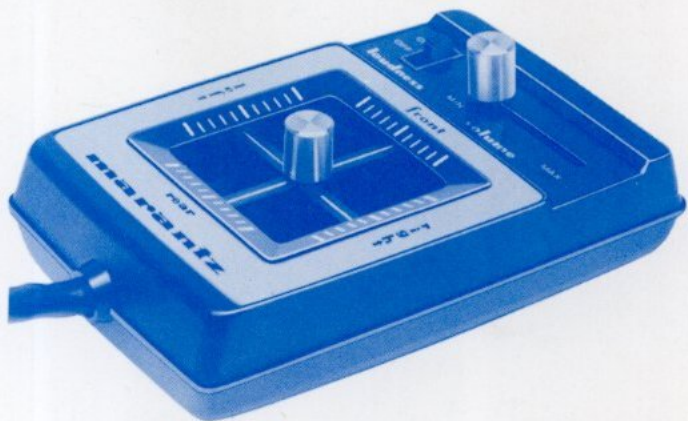

marantz®

We Sound Better

Model RC-4
Remote Control

GENERAL DESCRIPTION

The Model RC-4 Remote Control is specially designed for Marantz 4-channel audio components. The Model RC-4 incorporates a 4-channel balance control to adjust the relative outputs of all four channels, a volume control to adjust all four channels simultaneously, and a loudness switch to compensate for the human ear's response to bass and treble frequencies at low volume levels.

CONNECTION AND OPERATION

1. Be sure the power switch to the master unit is OFF.
2. Connect the plug of the RC-4 to the rear panel **REMOTE CONTROL** jack of the master unit.
3. Put the **REMOTE CONTROL** switch of the master unit into the **REMOTE** or **IN** position.
4. Reduce the **VOLUME** controls on both the master unit and on the RC-4 to minimum.
5. Center the **BALANCE** control on the RC-4.
6. Turn on the master unit.
7. Increase the **VOLUME** control on the RC-4. If sound is heard, adjust it to the desired level and skip to step 11.
8. If no sound is heard in step 7, increase the volume control on the RC-4 to maximum.
9. Increase the **VOLUME** control of the master unit to the loudest level at which you will be listening. (This establishes the range of the RC-4's volume control.)
10. Adjust the volume control on the RC-4 to the desired level. If the **VOLUME** control is at its maximum position and you wish to further increase the volume, extend the range of the RC-4's **VOLUME** control by simply increasing the setting of the master unit's **VOLUME** control.
11. Place the RC-4 control unit near your usual listening position.

12. Adjust the **BALANCE** control for the most pleasant 4-channel balance.
13. When listening at low volume levels, put the RC-4 **LOUDNESS** switch **ON**. The loudness switch compensates for human hearing characteristics by boosting the bass and treble response at low volume levels to achieve a more pleasing tonal balance.

CAUTION

1. Always turn the master unit's **VOLUME** control to its minimum position before changing the position of the master unit's **REMOTE CONTROL** switch. Failure to do so may result in damage to your loudspeakers.
2. Since the Model RC-4 is designed only for Marantz 4-channel units, no provisions are made for application to audio sets made by other companies. Any attempt to use the RC-4 with other sets may result in serious damage for which Marantz is not liable.



marantz®

MARANTZ CO., INC. • P. O. BOX 99 • SUN VALLEY, CALIFORNIA • 91352
A WHOLLY-OWNED SUBSIDIARY OF SUPERSCOPE INC., SUN VALLEY, CALIFORNIA 91352