



LEFT CHANNEL

- P.B. 18
- TAPE-1 14
- REC 14
- AUX 9
- PHONO 8
- TUNER 6, 7, 8, 9
- MIC 38
- TAPE-2 10, 4, 2, 5, 3
- OUT 19
- TAPE-2 21
- IN 22, 23, 21
- RIGHT CHANNEL**
- MIC 38
- PHONO 5
- AUX 2
- REC 15
- TAPE-1 17
- P.B. 17

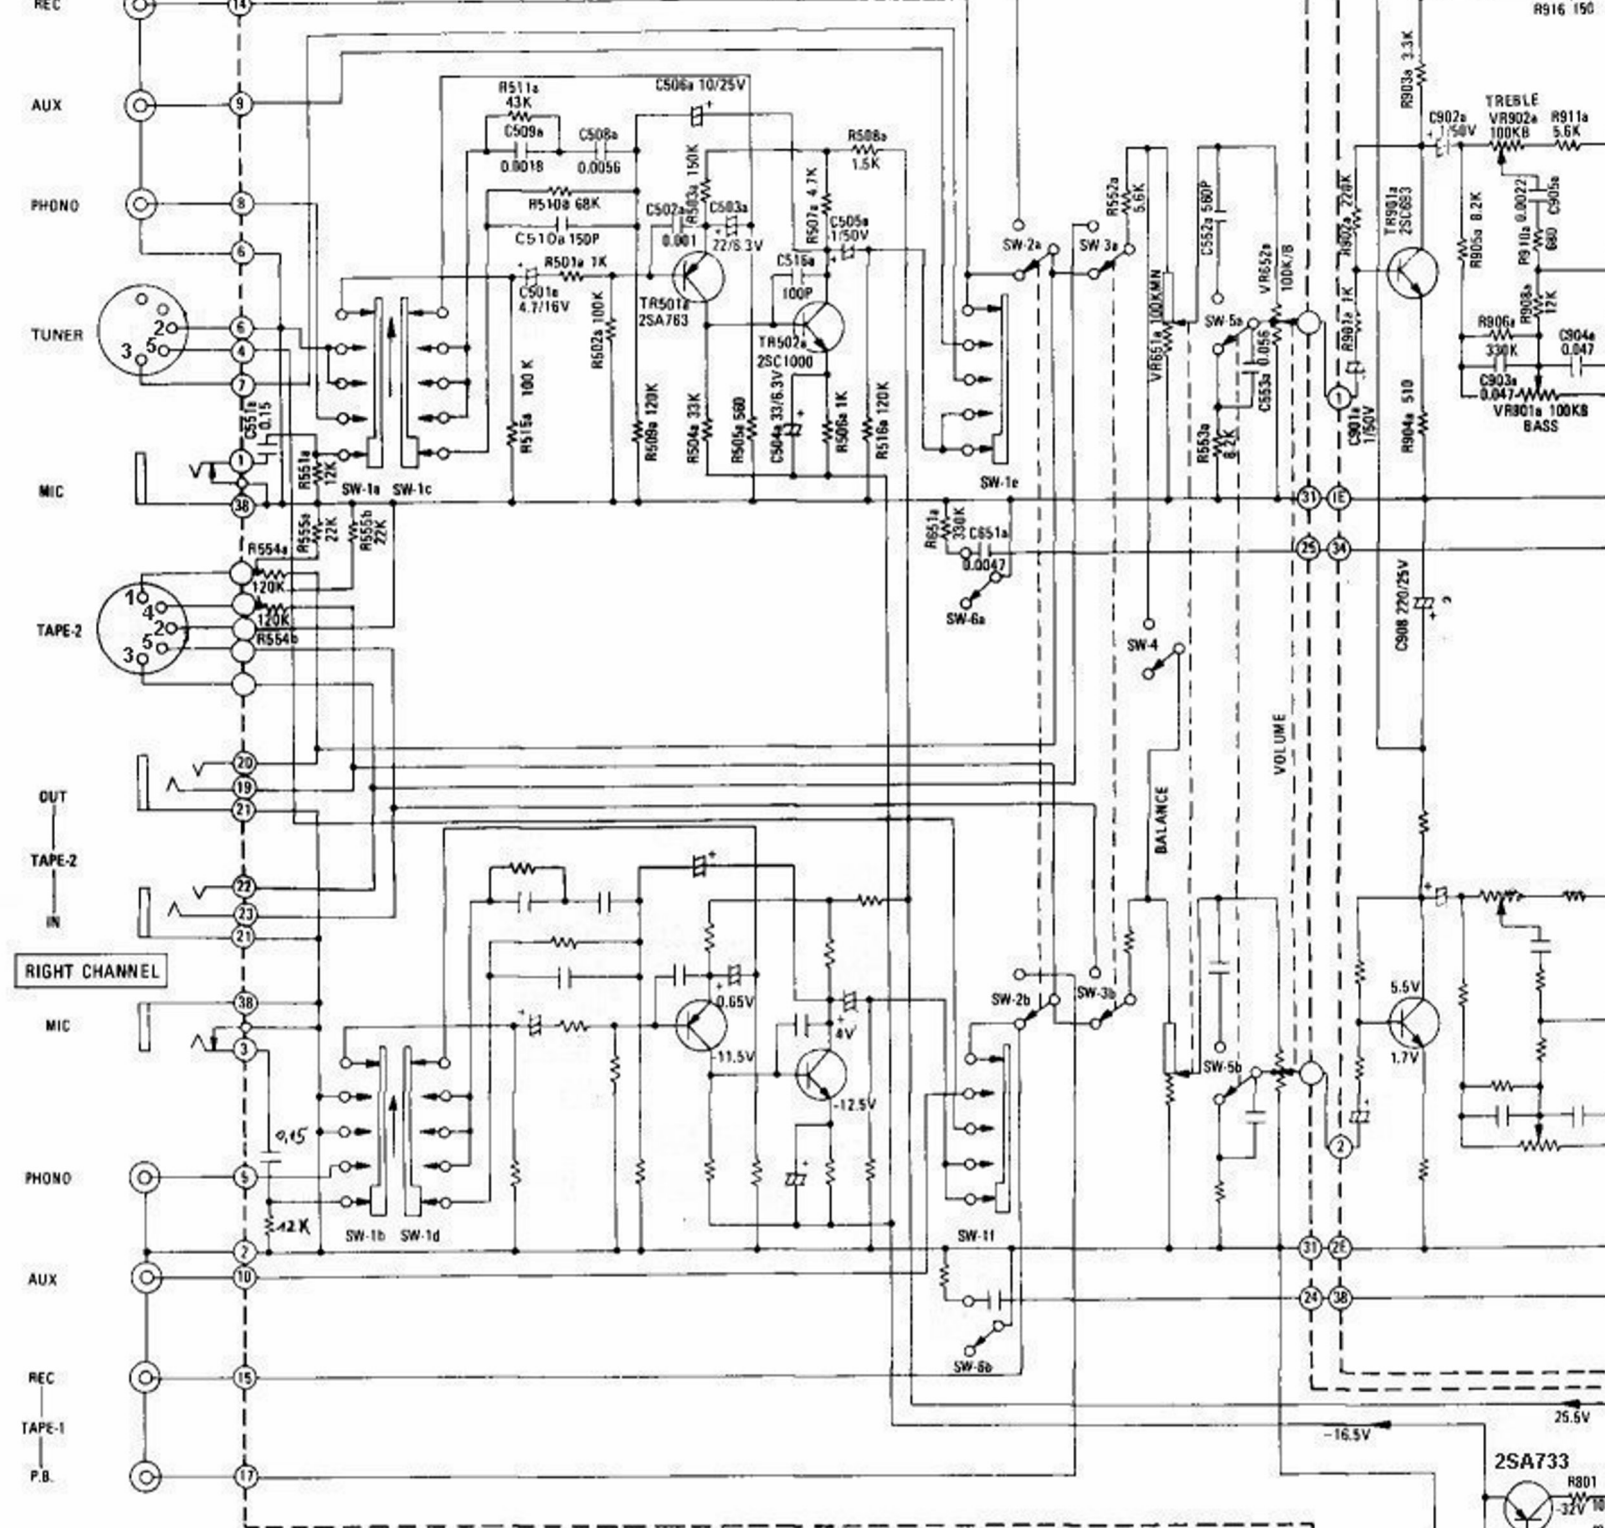

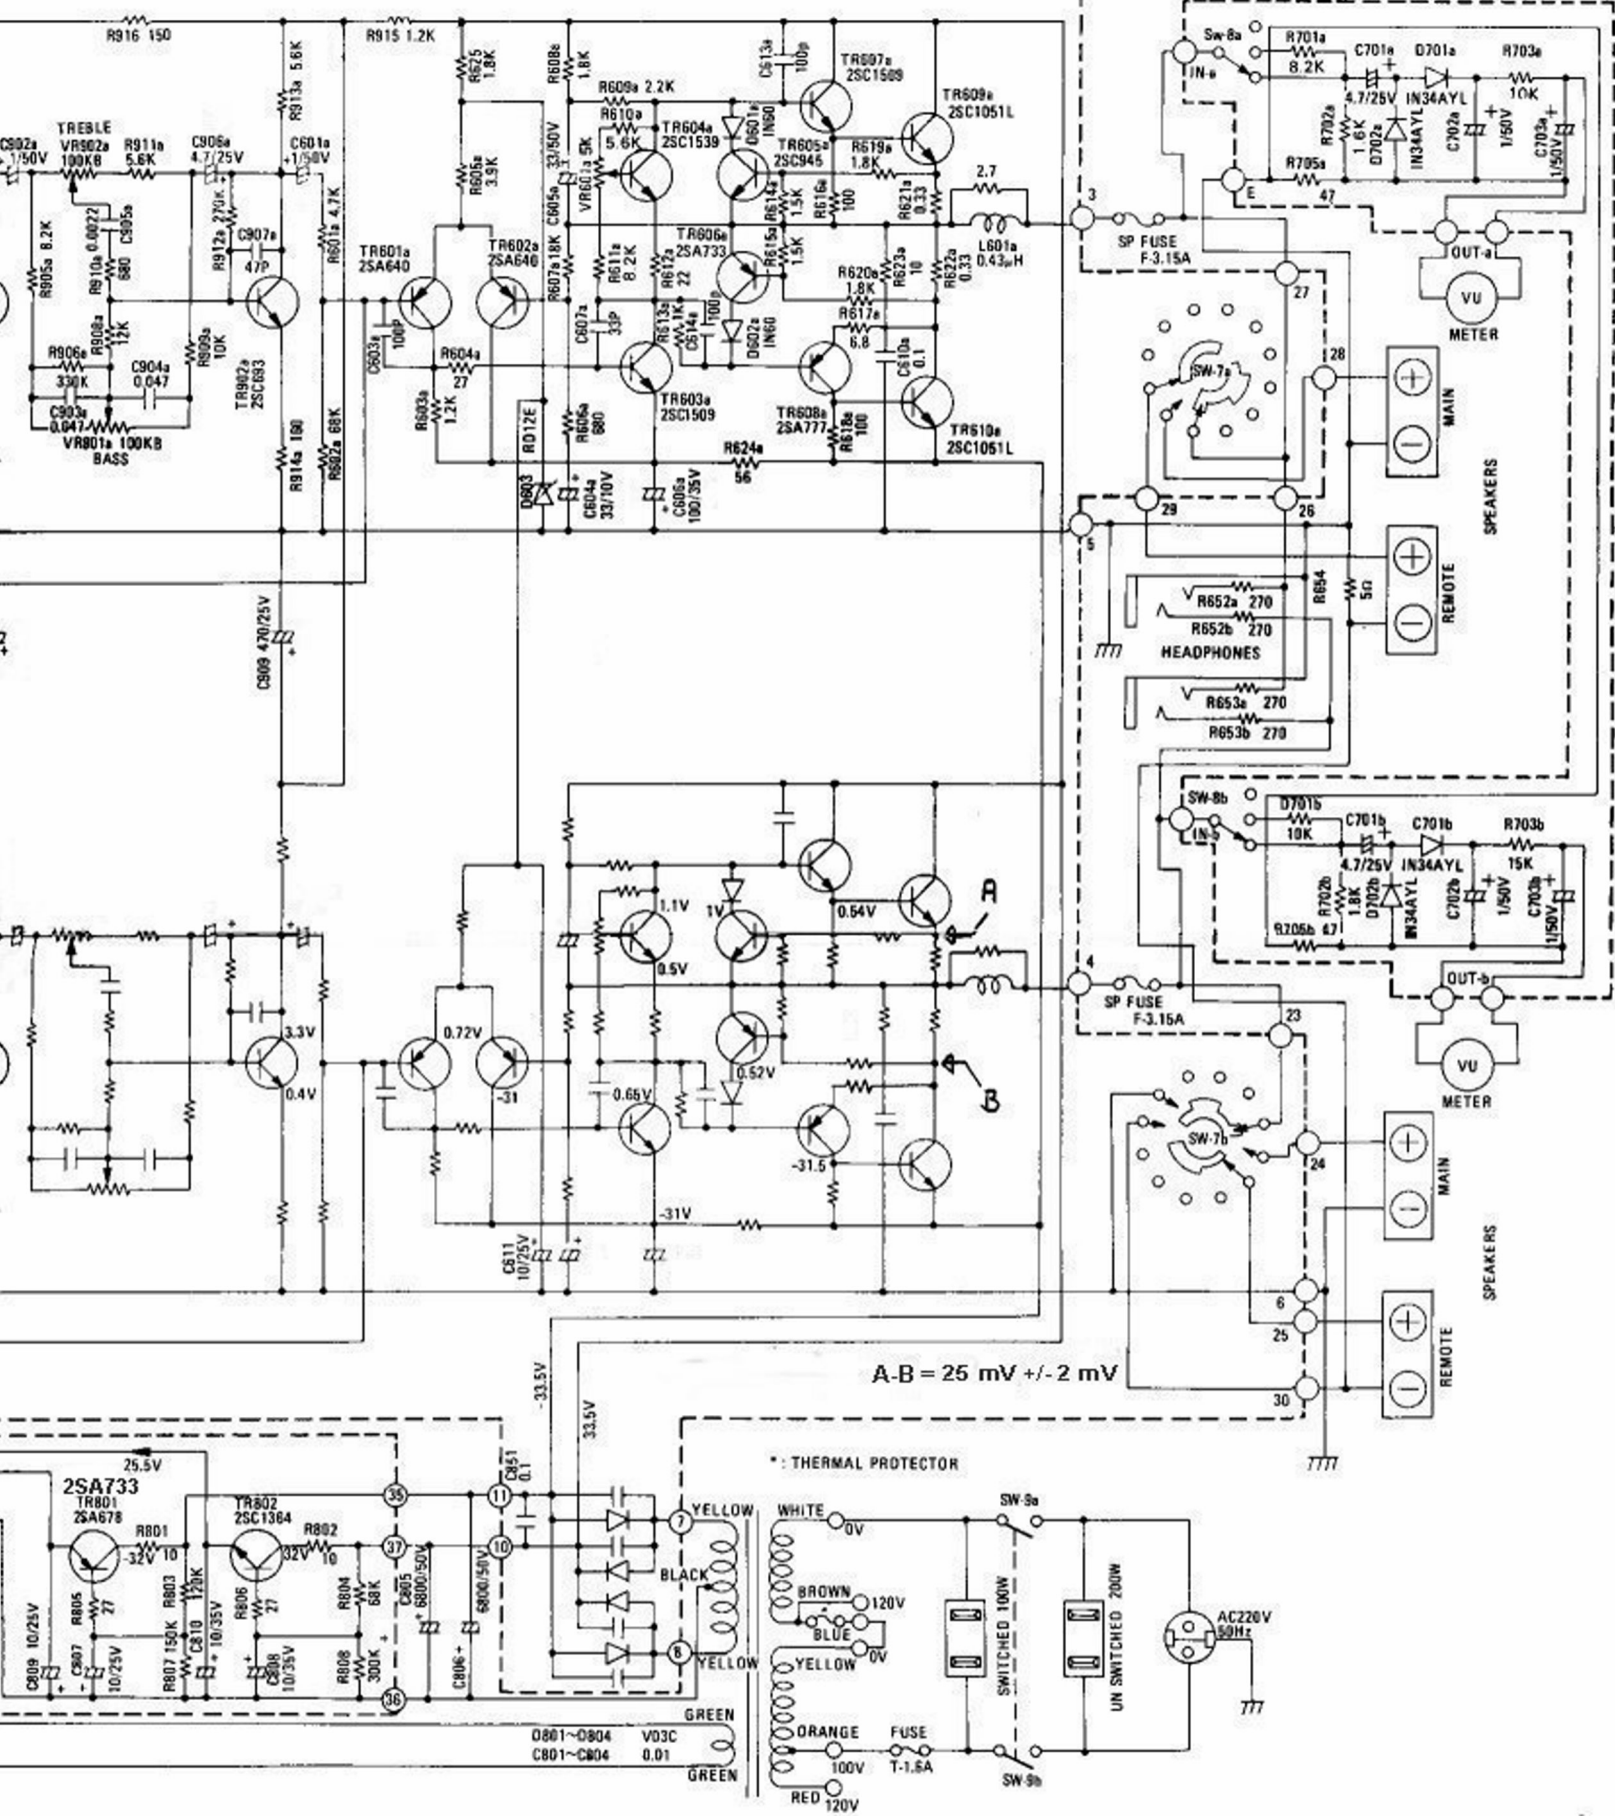

2SC1222
2SA641
2SA733
2SC945
2SA640



SUBSTITUTE TRANSISTORS

TR501 a, b	TR502 a, b	TR501 a, b TR602 a, b	TR603 a, b TR607 a, b	TR604 a, b	TR605 a, b	TR606 a, b	TR608 a, b	TR609 a, b TR610 a, b	TR801	TR802	TR803
2SA763	2SC1000	2SA640	2SC1509	2SC1539	2SC945	2SA733	2SA777	2SC1051L	2SA678	2SC1364	2SC945
2SA640	2SC1362	2SA763	2SD426	NONE	2SC1364	2SA641	2S8560	2SD371	2SA733	2SC945	2SC945
2SA726	2SC1313	2SA726	2SD414		2SC536	2SA678		2SC1030		2SC536	2SC536
2SA841	2SC1681	2SA841						2SC188			2SC188