

(L ch)

PHONO



(R ch)

PHONO

(L ch)

REC/PLAY

TUNER

AUX

REC OUT

TAPE

PLAYBACK

REC OUT

TAPE 2

PLAYBACK

(R ch)

TUNER

AUX

REC OUT


TAPE 1

PLAYBACK

REC OUT

TAPE 2

PLAYBACK

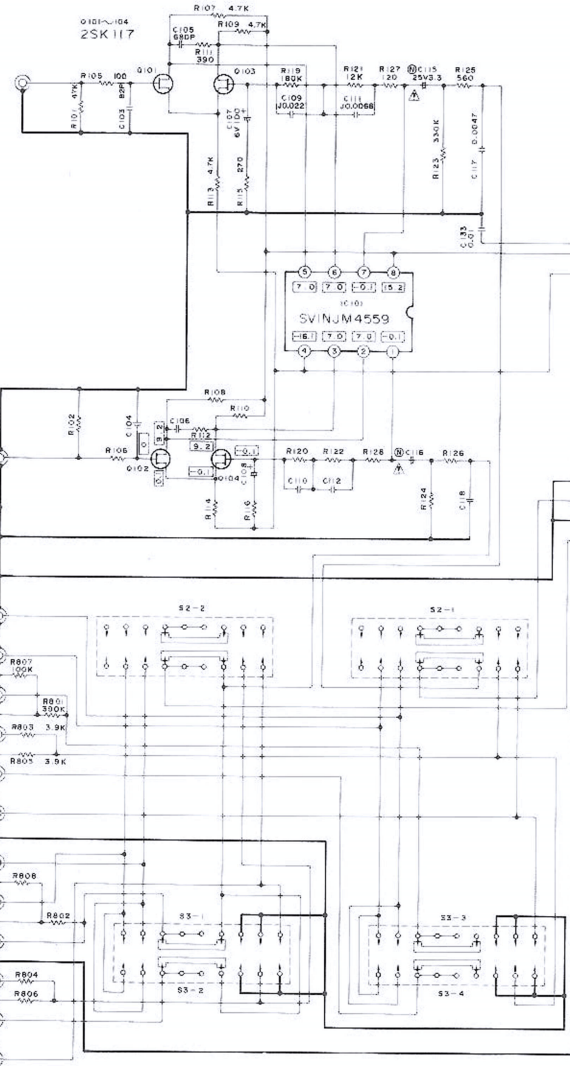

SUP 22630A

SUP 22690A

0301, 302
2SK109

0303~308, 309, 304
2SC1845

0313, 314
2SA992

0317, 318, 325, 326
2SA1123

0321, 322
2SD661

0328, 330
2SD415

0333, 334
2SB688

0301, 302
MA 26

0309~312
2SA1015

0315, 316
2SA992


0319, 320, 323, 324
2SC2631

0327, 328
2SB549

0331, 332
2SD718

0303, 304, 305, 306
MA162A

0301, 302
MA 26

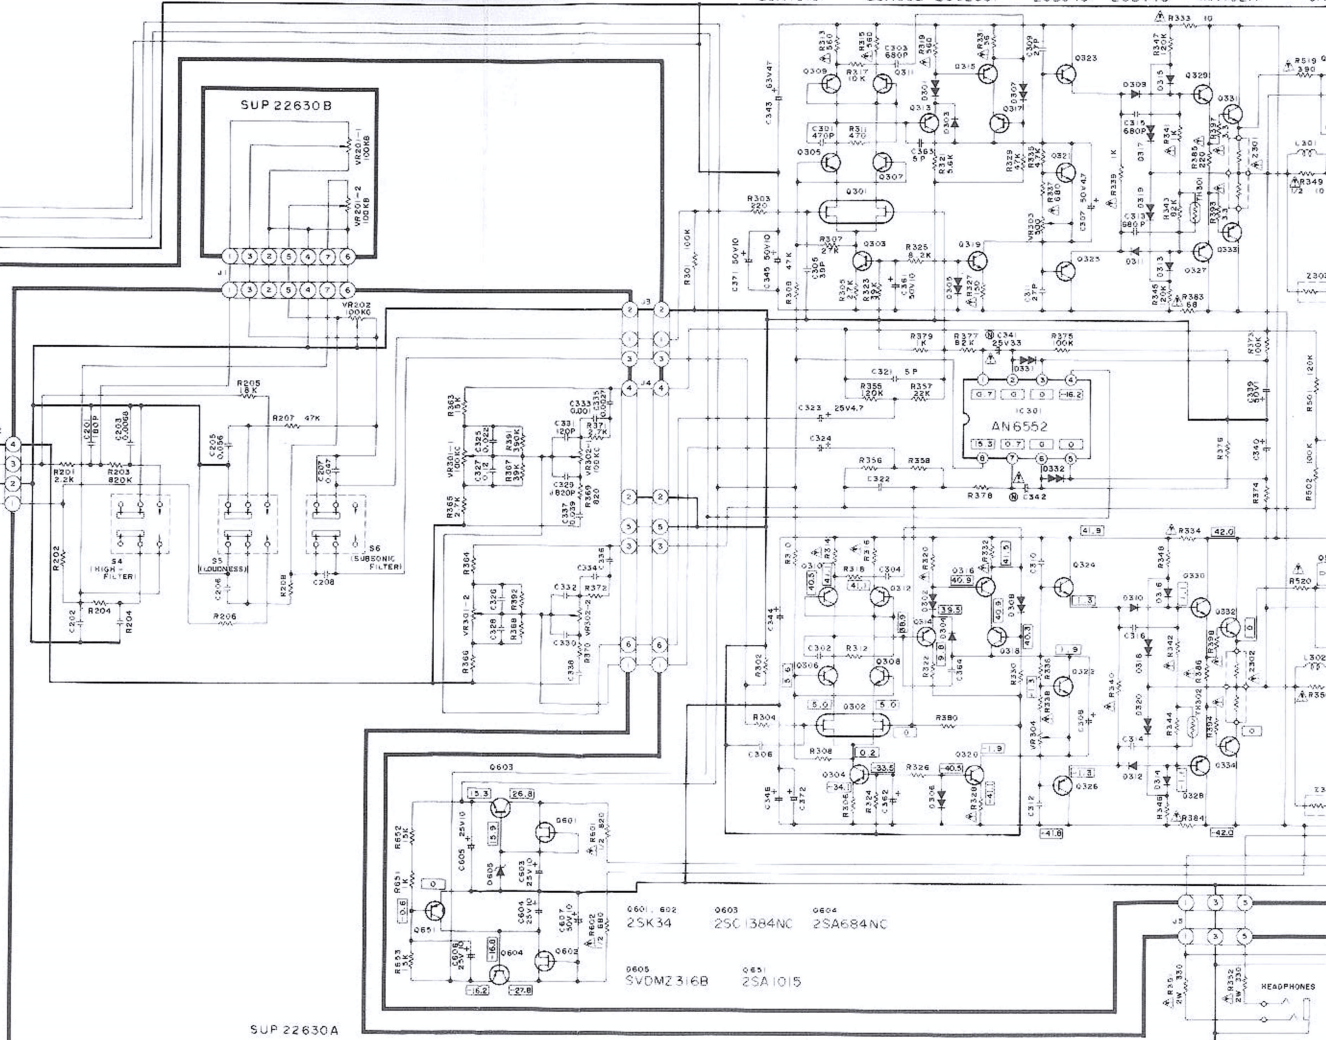

0601, 602
2SK34

0603
2SC1844NC

0604
2SA684NC






0605
SVDM2316B

0601
2SA1015


HEADPHONES

029, 330 033, 334 050, 502, 505~508, 517~520, 53, 532
SD415 25B68 MA26-2


331, 332 0303, 304, 305, 306 0309~316
SD718 MA162A QA90

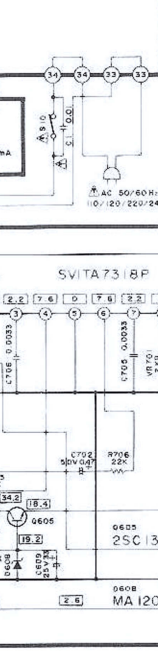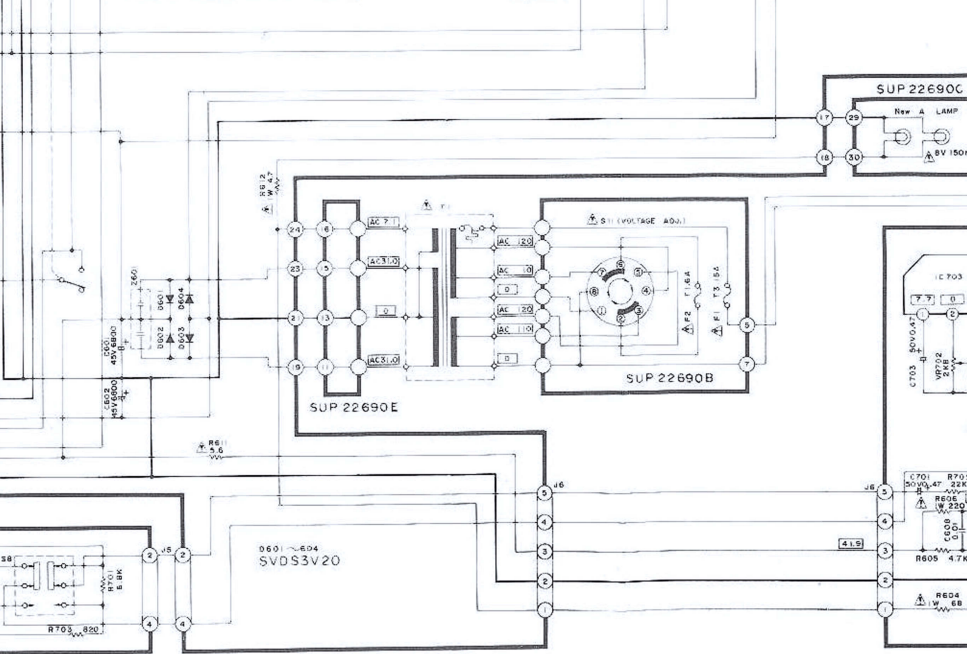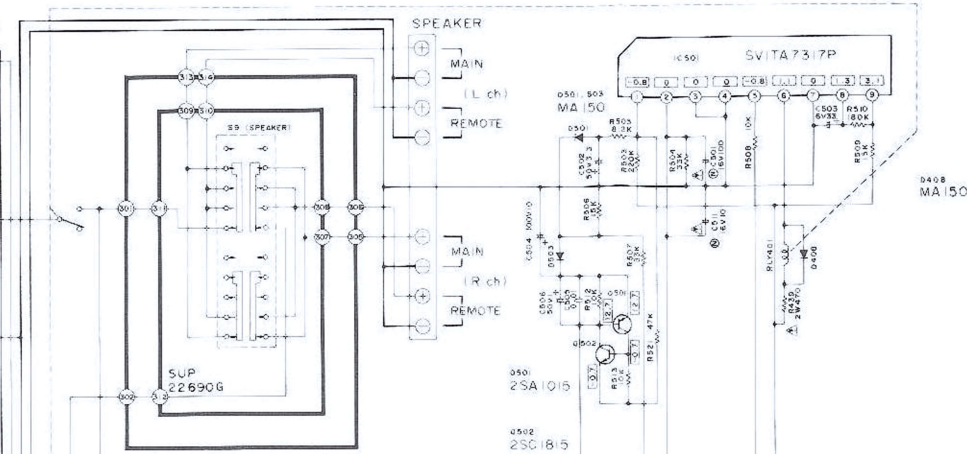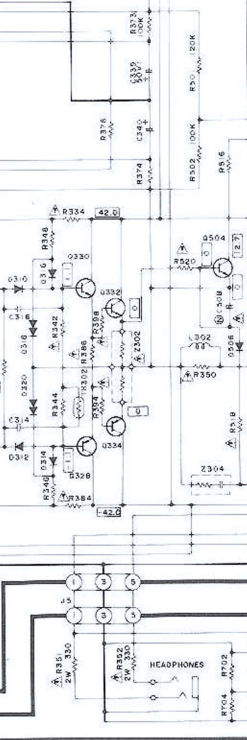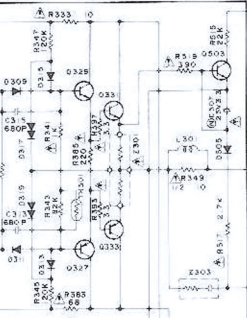


(XA)

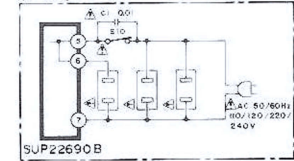

(XL)

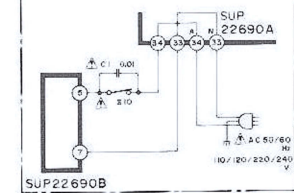

TERMINAL GUIDE

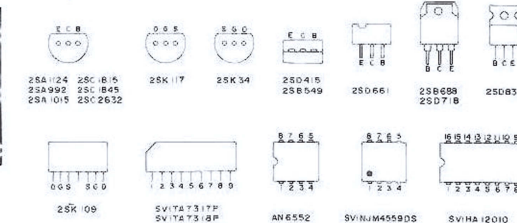

NOTES

1. S2 Input selector switch in "phone" position.
Tape 2 → Tape 1 → phono → tuner → aux
2. S3 Rec selector switch in "phono" position.
Tape 2 → Tape 1 → 2 → off → phono → tuner → aux
3. S4 High Filter switch in "off" position.
4. S5 Loudness control switch in "off" position.
5. S6 Subsonic filter switch in "off" position.
6. S8 FL range selector in "x 1" position. (x 1 → x 0.01)
7. S9 Speaker selector in "main" position.
8. S10 Power switch in "on" position.
9. S11 Voltage selector in "220V" position.

