



UHER

ROYAL STEREO 8000

The UHER 8000, lavishly provided with features that will surprise even the most experienced and ardent audiophile is the result of many years of tape recorder design and engineering. The UHER 8000 is one of the most sophisticated tape recorders of its kind, offering a range of possibilities normally found only in the studio—stereo recording and playback, synchronous sound-on-sound, multiplay, reverberation and echo effects, a built in slide projector synchronizer and two channel mixer, all conveniently arranged and easily accessible. In addition to these obvious technical advantages the UHER 8000 is styled with functional elegance to suit any decor.

- **4 Tape Speeds**
- **Stereo Recording and Playback**
- **Synchronized Sound-on-Sound Recording**
- **Multiplay**
- **Reverberation**
- **Dia-Pilot**
- **3 Magnetic Heads**
- **Acoustic Stop/Start Control**
- **Input Mixer for Mono and Stereo**
- **Remote Control**

TAPE RECORDER

TECHNICAL SPECIFICATIONS

Four tracks to international standards

Tape Speeds: 15/16, 1 $\frac{7}{8}$, 3 $\frac{3}{4}$, 7 $\frac{1}{2}$ ips

Reel Size: up to 7"

Frequency Response:

50— 4000cps at 15/16 ips

50— 8000cps at 1 $\frac{7}{8}$ ips

50—16000cps at 3 $\frac{3}{4}$ ips

50—20000cps at 7 $\frac{1}{2}$ ips

Dynamic Range: 50 db

Wow and Flutter: 0.15% at 7 $\frac{1}{2}$ ips (audible frequencies only)

Channel Separation: 50 db

Output Power: 2 x 2 watts (push-pull output stage)

Power Supply: 110, 130, 150, 220, 240, 250 volts A.C. 60 cps

Dimensions: 16" x 14" x 7"

Weight: 27 $\frac{1}{2}$ lbs

CHASSIS

This tape recorder features a cast aluminum chassis for durability, heavy capstan flywheel and long life oilite bearings.

CASING

The case is of wood, well reinforced, covered with an attractive synthetic black Morocco leather and fitted with a key-operated lock. The unit measures 16" wide, 14" front to back, and 7" high.

ALL TRANSISTOR

The UHER ROYAL STEREO 8000 is fully transistorized (19 transistors).

SPEAKER SYSTEM

The unit has two built-in 5 x 7" loudspeakers, one on each side of the case. The output amplifiers, also transistorized, are capable of putting out a signal of 2 watts per channel, which is more than adequate for an efficient speaker system. For optimum sound reproduction quality however, the machine would normally be used to feed an external power amplifier and loudspeakers. At the slowest speed and in the echo mode the tape recorder can be used to check pronunciation in the study of languages: one has simply to say a word or phrase and hear it played back a moment later. The numerous features of this machine provide a wide range of facilities most useful in the study of language or music.

PLAYING TIMES

The playing times listed below pertain to 2400 feet of tape on a 7" reel.

TAPE SPEED	FREQUENCY RESPONSE	PURPOSE	TIME
15/16 ips	50-4000 cps	Longer playing time	2 x 8 hours
1 $\frac{7}{8}$ ips	50-8000 cps	long playing time & good fidelity	2 x 4 hours
3 $\frac{3}{4}$ ips	50-16000 cps	wide frequency response	2 x 2 hours
7 $\frac{1}{2}$ ips	50-20000 cps	the ultimate in Hi-Fi recording	2 x 1 hour

WARRANTY

Six months warranty.

UHER ROYAL

REELS AND TAPE

Maximum reel size 7", track configuration—4 tracks to international standard, up to 22 hours playing time (monaural), automatic end-of-tape stop.

DIA-PILOT

Dia-Pilot light and pushbutton make preparation of automatic slide presentation both easy and accurate.

VU-METERS

Just above the START—STOP—PAUSE keys are two level indicating meters, one for each channel. To the right are two blue indicator lights, the upper is illuminated when the instrument is set for playback from the upper track and the lower for the second track; both are illuminated for stereo. To the left of the meters are two red lights, showing when each channel is set for recording. Thus for MULTIPLAY 1, the upper red light and the lower blue light are on when the recording button is depressed. For MULTIPLAY 2 the two lights are reversed.

MASTER ON/OFF SPEED SWITCH


One master switch controls the mechanical speed selector and the ON-OFF mode. There are seven positions—four speeds with three OFF positions between. Selecting the speed also adjusts equalization for each.

VOLUME—BALANCE—TONE

The playback level is controlled by one knob, balance between channels by a second, and tone—affecting playback only—by a third. The balance control, in monaural operations, gives normal monitoring from the input signal when in the counterclockwise position and from the tape when in the clockwise position. Two recording level controls are provided—the left one for microphone inputs and the right one for inputs from the phono receptacle on the rear apron panel.


START—STOP—PAUSE

Piano-type keys are used for the start, stop, and pause operations. In PAUSE the pinch roller is held away from the capstan so that the tape remains stationary while all other controls are in the same positions. The pause operation provides an instant start and stop action so that words can even be cut in two in recording. For instance, one can say "Micro—pause—phone" in recording, while in playback it will sound like "Microphone" without interruption.

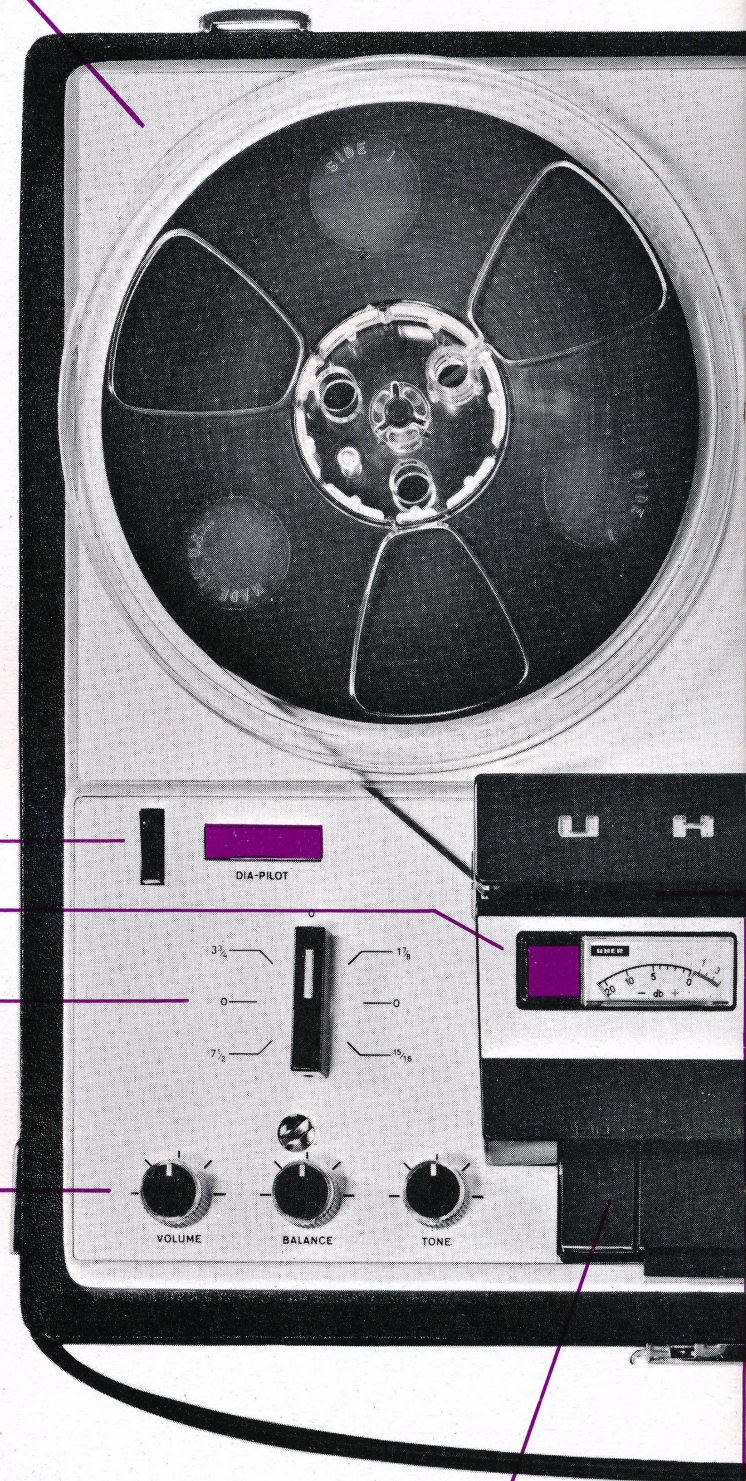

Built with the car

STEREO 8000

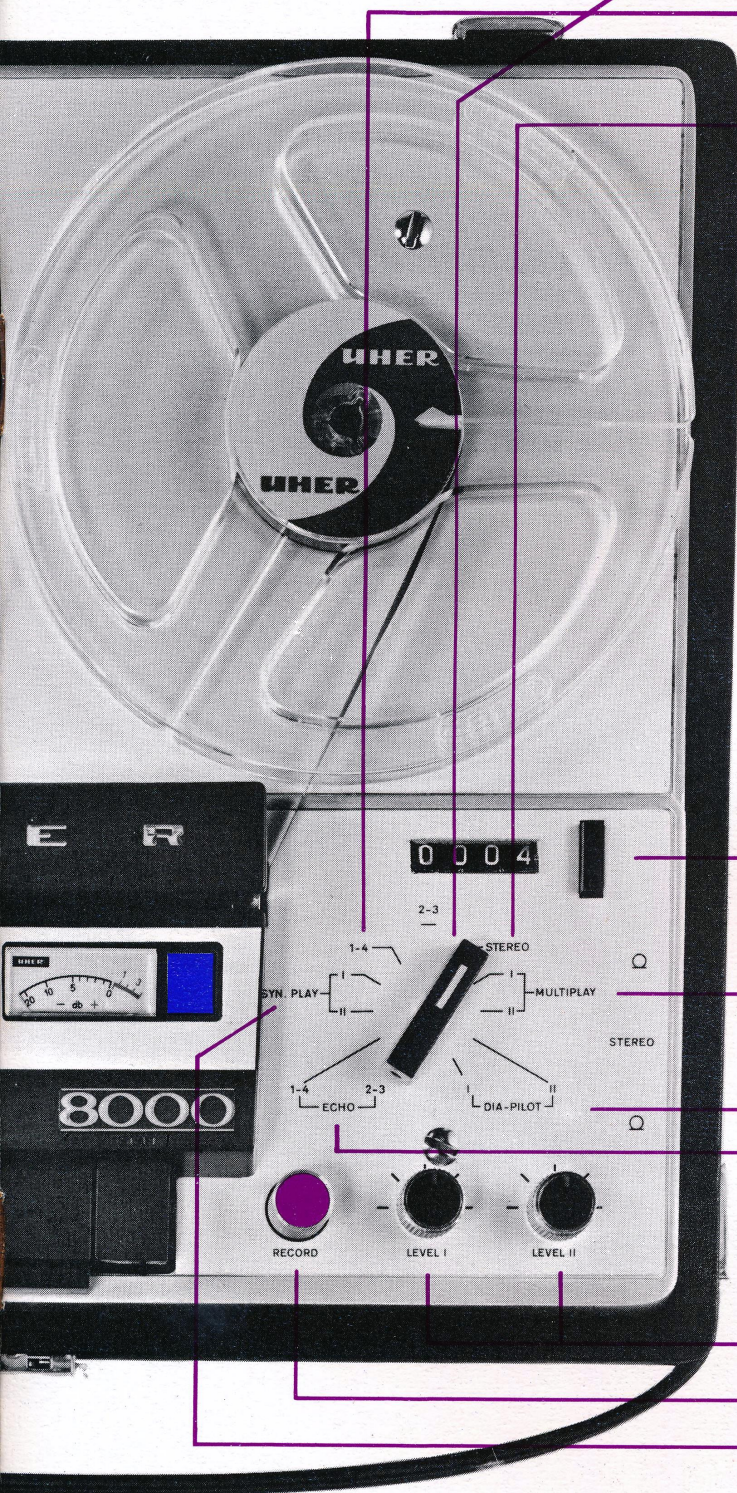

MULTIFUNCTION SWITCH

Multifunction switch, together with an interlocked RECORD button, controls all of the electronic functions in its eleven positions.

MONAURAL RECORDING

1—4 mono record or play on upper track.
2—3 mono record or play on lower track.

STEREO RECORDING

Stereo—record or play.

MULTIPLAY

Multiplay 1—permits recording on the upper track from microphone and mixing with material from lower track.

Multiplay 2—permits recording on lower track and mixing material already recorded on upper track.

4 DIGIT COUNTER

With pushbutton reset.

DIA-PILOT

Dia-Pilot 1—used for recording from microphone and/or from phono record or another tape recorder on upper track as commentary for slides.

Dia-Pilot 2—after making recorded commentary on upper track, this position is used to record sub-sonic tone on lower track at points where a slide is to be changed and for playback with slide projector thereafter, with the slide changing at each point that the tone button was depressed in the second run-through.

RECORDING LEVEL CONTROLS

RECORDING BUTTON

Recording button must be depressed simultaneously with the START key to prevent accidental erasure.

ECHO—REVERBERATION

Echo 1-4 permits adding delayed sound to an original recording on upper track, the amount of delay depending on the speed of the tape.

Echo 2-3 is for the same operation on the lower track.

SYN—PLAY


Syn-Play 1—used for recording on one track for later recording another signal in synchronism with the first but on a second track when the switch is turned to the *Syn-Play 2* position. In this manner practically any trick type of recording can be made with no external interconnecting or switching.

SOUND HEADS

3 long life narrow-gap magnetic sound heads for monaural and stereo recordings, provide also for A (straight) and B (off-the-tape) monitoring.


of a watchmaker...

MONAURAL MICROPHONE STEREO MICROPHONE MONAURAL MICROPHONE

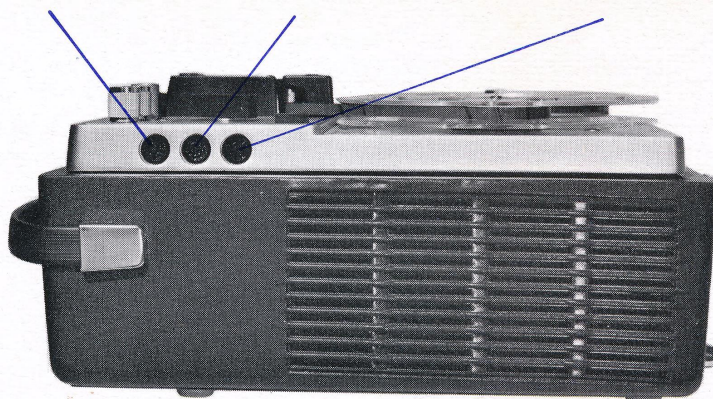

SIDEVIEW OF RECORDER

REARVIEW OF RECORDER

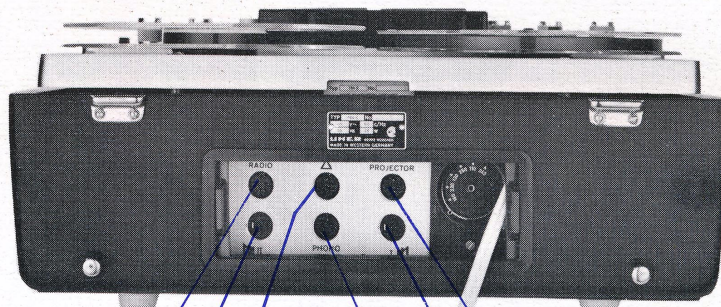

STEREO AND MONAURAL RADIO INPUT AUTOMATIC SLIDE PROJECTOR
 EXTENSION SPEAKER EXTENSION SPEAKER
 REMOTE CONTROLS F111, F211, AND F362 PHONO INPUT
 AND F411, AKUSTOMAT

ACCESSORIES



F 411 AKUSTOMAT

Acoustic switch for sound-controlled start and stop of the recorder from any signal source.




A 121 STEREO TRANSISTOR MIXER

The concept of this high-quality multi-channel mixer is based on professional mixing techniques. The five straight-line controls allow continuous blending and fading of five monaural signals or two stereo signals plus one monaural signal. Each stereo channel can be adjusted individually. A direction control makes it possible to "move" a monaural source across the stereo sound field. Each input is adapted for the connection of either a microphone, a radio set, a tape recorder or a record player. It is equipped with a separate level control and can be switched on and off individually and noiselessly by means of a rocker-type switch.

SPECIFICATIONS


Five built-in two-stage transistor amplifiers • Built-in tone generator • Frequency response: flat within 20-20000 cps • Output voltage: approximately 30 millivolts • Power supply: 9 volt dry battery as used for transistor radios.




W 882 STEREO EXTENSION SPEAKERS

This moderately priced balanced loudspeaker set and fine acoustic characteristics of the wooden cabinets, improve the stereo effect produced by the UHER ROYAL STEREO 8000. The 6 x 10" oval loudspeakers have a frequency response of 50-15000 cps. Rating: 5 watts. Impedance: 5 ohms. Dimensions: closed approximately 11" x 16" x 12", single cabinet approximately 11" x 16" x 6".

YOUR CHOICE OF MICROPHONES

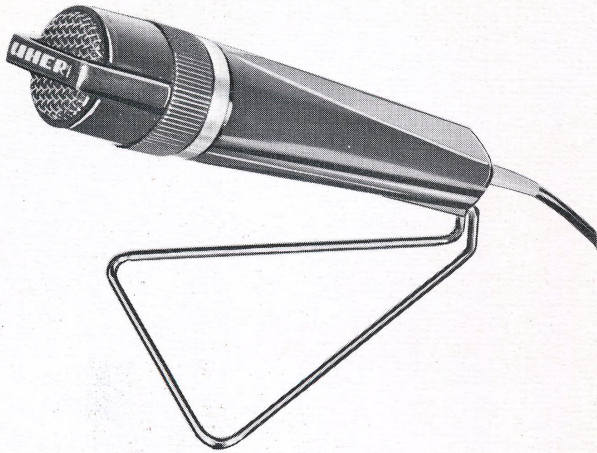


M 134 DYNAMIC MICROPHONE
Omnidirectional.
Frequency response: 80—10000 cps.

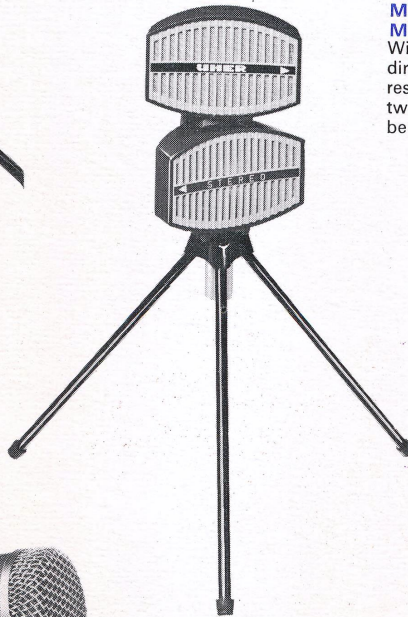

M 582 DYNAMIC STEREO MICROPHONE
With two overlapping cardioid directional patterns. Frequency response: 80—14000 cps. The two microphone capsules can also be used separately (A-B Stereo).



M 531 DYNAMIC MICROPHONE
Cardioid response and speech/music switch.
Frequency response: 80—12000 cps.

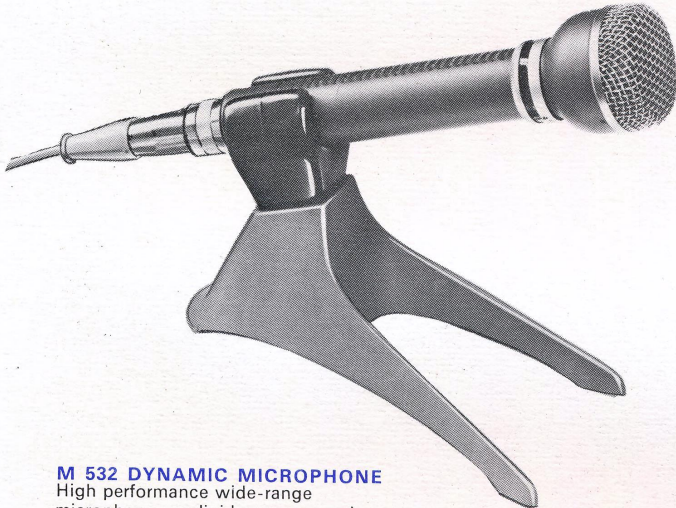

M 532 DYNAMIC MICROPHONE
High performance wide-range microphone, cardioid response and continuously variable speech/music switch.
Frequency response: 40—16000 cps.



M 533 DYNAMIC MICROPHONE
High performance type, hypercardioid response, built-in windscreen and continuously variable speech/music switch. Includes a collapsible table stand, an adjustable table stand joint and a Lavalier suspension. Frequency response: 40—16000 cps.

A 261 TELEPHONE ATTACHMENT

For connection to the telephone circuit.

F 111 HAND OPERATED REMOTE CONTROL

Start/stop remote control.

F 211 FOOT OPERATED REMOTE CONTROL

Same as F III but foot operated.

F 362 BALANCE REMOTE CONTROL

Balance and start/stop remote control with 15 feet of cable.

K 111 MICROPHONE EXTENSION CABLE

15 feet of cable for the M134, M531, M532 and M533 microphones.

K 116 MICROPHONE EXTENSION CABLE

15 feet of cable for the M582 stereo microphone.

K 541 STEREO AUDIO CABLE

For connecting a stereo radio set to the tape recorder.

K 823 ADAPTOR

For connecting a 3-pin loudspeaker plug to a 2-pin loudspeaker socket.

K 832 ADAPTOR

For connecting a 2-pin loudspeaker plug to a 3-pin standard recorder socket.

K 853 ADAPTOR

For connecting a 3-pin standard plug to a 5-pin stereo socket.

K 911 PROJECTOR CABLE

Connects the ROYAL STEREO 8000 to an automatic slide projector.

M 911 MICROPHONE FLOOR STAND

Only 16" long when folded.

W 212 MIDGET MAGNETIC EARPHONE

For monitoring recordings and for playback. Complete with earclip and stethoclip.

W 671 DYNAMIC STEREO HEADPHONES

For monitoring and playback of monaural and stereo recordings.

UHER

4000 REPORT 'S'

Portable Professional Tape Recorders.

UNIVERSAL 5000

Ideal Combination of Hi-Fi Tape Recorder and Dictating Machine.

7000 STEREO

Tape Recorder for the Home Enthusiast.

HI-FI 22/24

Stereo Tape Deck for Highest Demands

LANGUAGE LABORATORIES

Engineered to Meet the Needs of Schools and Universities.



BLAUPUNKT STEREO CONSOLES

FM-AM-Shortwave with GARRARD Deluxe Changer. Also Table Models and Portables.

BLAUPUNKT HI-FI CAR RADIOS

FM-AM-Shortwave with Custom Kits for Every Automobile, Boat or Plane.

ROBERT BOSCH (CANADA) LTD.

33 ATOMIC AVE.,
TORONTO 18, ONT.

3429 PARK AVE.,
MONTREAL 18, QUE.


FOR COMPLETE DETAILS AND DEMONSTRATION SEE

UHER ROYAL STEREO 8000

UHER 4000 REPORT-S

PORTABLE PROFESSIONAL

Tape Recorder

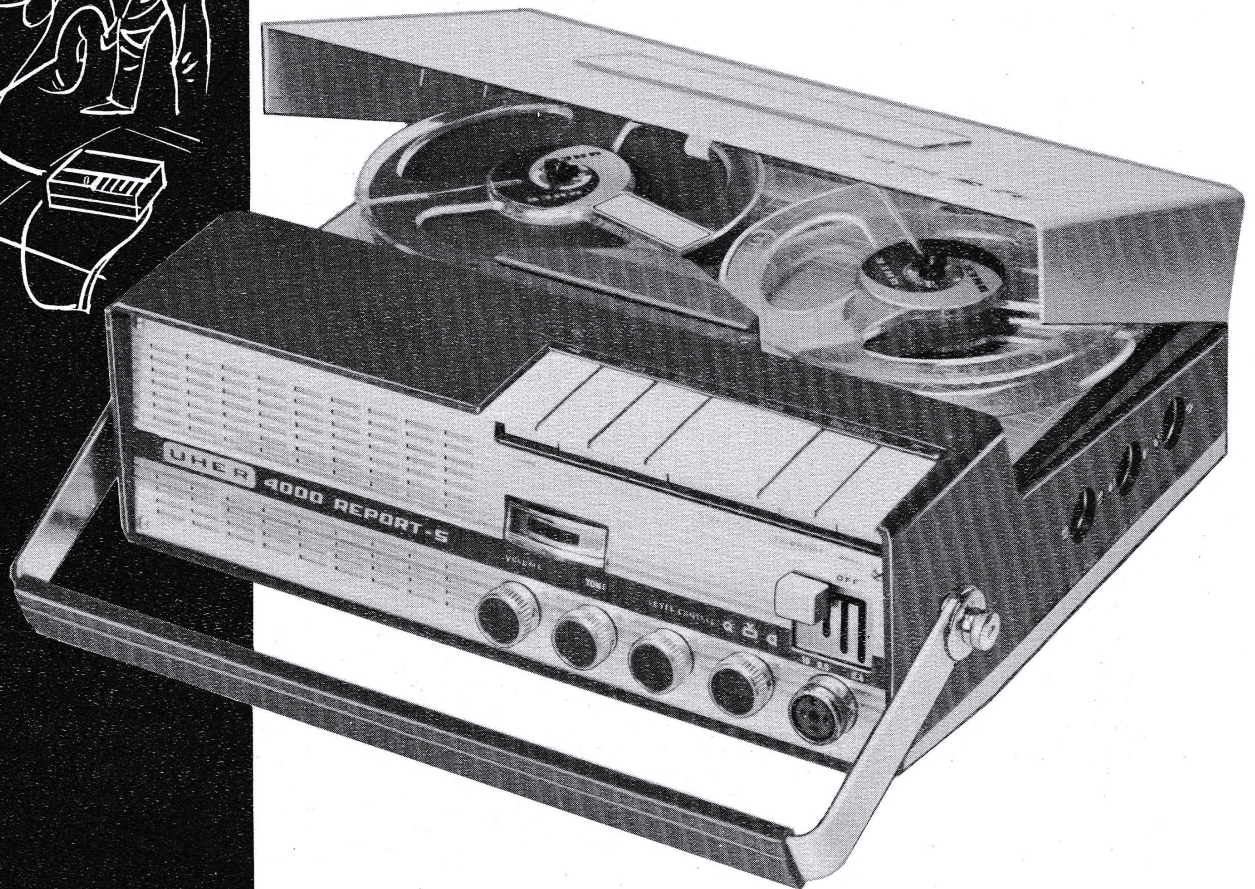


- STUDIO QUALITY SOUND RECORDING
- OPERATES ANYWHERE IN ANY POSITION
- 4-SPEEDS, INCL. 7½ I.P.S.
- FULLY TRANSISTORIZED
- BATTERY AND POWER OPERATED
- CSA APPROVED

UNIQUE FEATURES


- Portable like a press camera (12 lbs. including battery and carrying case)
- Operates in any position, reels lock into place
- 4 speeds: $7\frac{1}{2}$, $3\frac{3}{4}$, $1\frac{7}{8}$, $\frac{15}{16}$ i.p.s.
- Fully transistorized (12 transistors)
- 5" tape reels provide up to 4 hours recording time
- Wide selection of accessories
- Operates from rechargeable "dryfit" battery or 5 size D batteries or 110-250V AC power line or 6-12-24V car battery
- Sturdy all-metal casing
- "AKUSTOMAT" sound controlled automatic start and stop switch *
- Remote control on microphone, also hand- and foot-operated remote controls *

* Optional equipment.

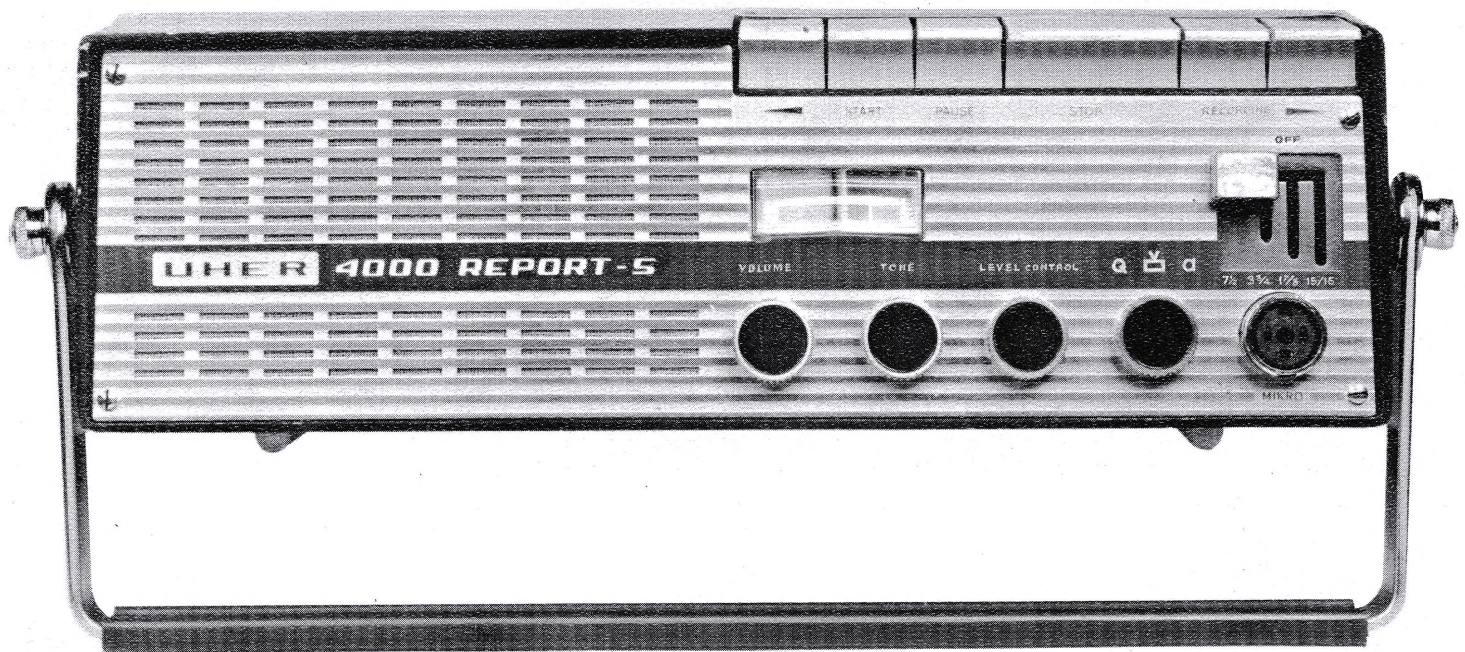

IMPORTANT DESIGN FEATURES

Excellent speed stability due to high-speed flywheel which rotates at constant RPM regardless of the selected tape speed • Gate type speed selector combined with on/off switch • High speed rewind independent of the selected tape speed • Special reel lock keeps reels in place in any position of the tape recorder • Separate controls for recording level and playback volume • Continuously variable tone control • Recording level indicator also indicates battery condition • Operating time: 3-4 hours on fully charged "dryfit" battery.

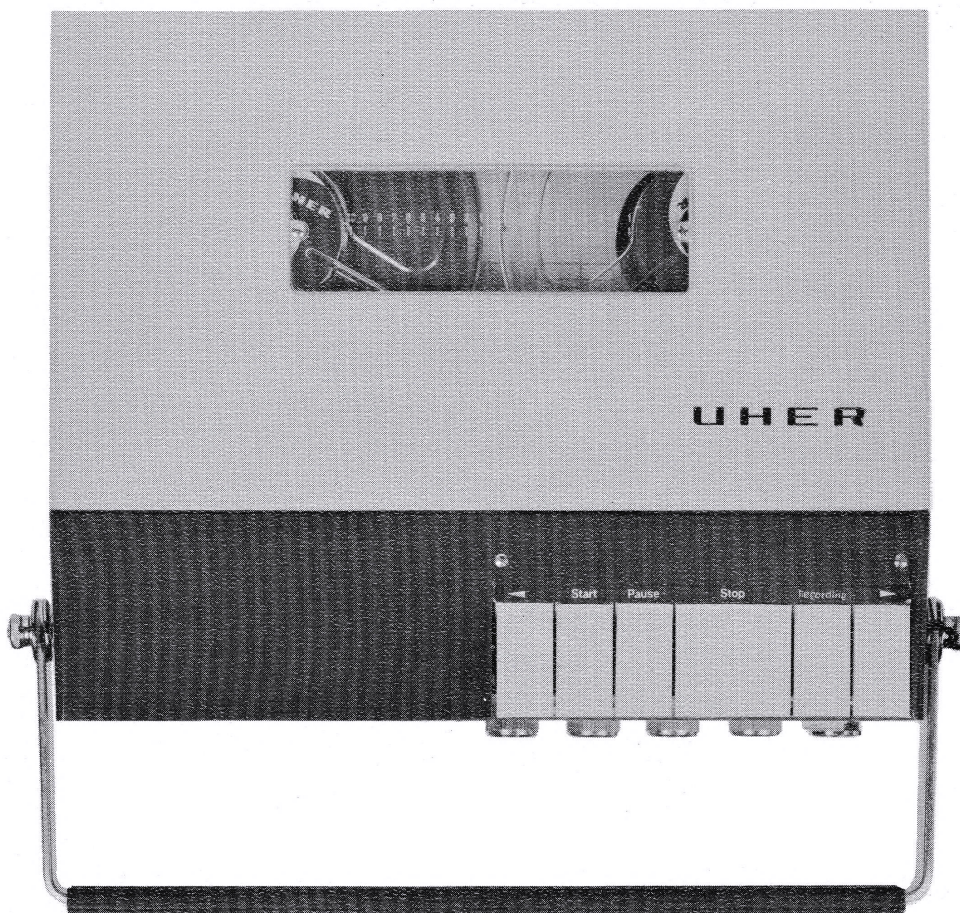


OUTSTANDING VERSATILITY

USED FOR:

- On the spot recording wherever you are
- High fidelity music recording at concerts or from radio and record player
- Office dictation
- Conference minutes
- Court reporting
- Scientific and medical reports
- Educational purposes
- Salesmen's reports (e.g. recorded in the car)
- Naturalists (bird calls, animal sounds etc.)
- Investigators
- Student pilots (monitoring ATC)

TECHNICAL SPECIFICATIONS

Two tracks to international standard • Reel Size: 5" • Four tape speeds: $7\frac{1}{2}$, $3\frac{3}{4}$, $1\frac{7}{8}$, $\frac{15}{16}$ i.p.s. • Frequency response: (± 3 db): 40-20,000 cps. @ $7\frac{1}{2}$ i.p.s., 40-17,000 @ $3\frac{3}{4}$, 40-10,000 cps. @ $1\frac{7}{8}$ i.p.s., 40-4,500 @ $\frac{15}{16}$ i.p.s. • Dynamic range: 55 db • wow and flutter: $\pm 0.15\%$ @ $7\frac{1}{2}$ i.p.s. (audible frequencies only) • Output power: 1 watt (push pull power stage) • Inputs: Micro 0.1 mV @ approx. 2 kilo-ohm, Radio 1 mV @ 47 kilo-ohms, Phono 25 mV @ 1 megohm • Outputs: 2 volts @ 4 ohms, 1 volt @ 15 kilo-ohms • Dimensions approx.: 11" x 8" x 3" • Operating weight: 12 lbs. • Sockets for radio, phono, multi-channel mixer, telephone attachment, loudspeaker and earphone, microphone socket with locked plug • Socket for hand- or foot-operated remote control and Akustomat.

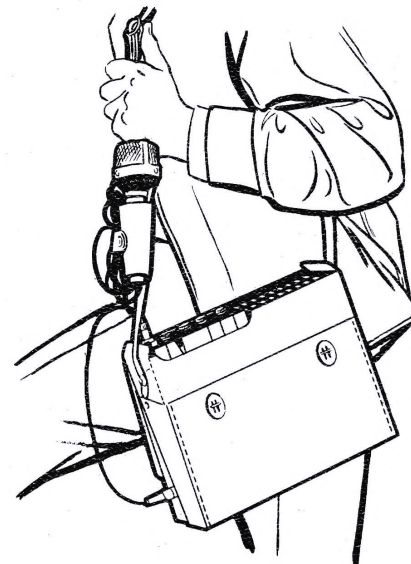

UHER

TAPE RECORDERS

UHER 4000 REPORT-S

ACCESSORIES

K 111 Microphone Extension Cable — Length approx. 16 ft., for microphone models M 132, M 531 and M 532.

K 122 Microphone Extension Cable — Length approx. 16 ft., for the remote control microphones M 511 and M 512.

K 511 Audio Cable — For connecting a radio set to the tape recorder for recording and playback.

K 641 Connection Cable — For simultaneous connection of a M 511 or M 512 microphone or a K 711 or K 712 automobile adapter cable and the model Z 111 AC-operated power unit and battery charger to the 4000-REPORT-S.

K 711 Automobile Adapter Cable — For operating the 4000 REPORT-S from a 6-volt or 12-volt battery via the cigarette lighter receptacle. (Specify whether for American or European car; plus or minus to ground).

K 712 Automobile Adapter Cable — Same as above but for 24 volts.

K 713 Connection Cable — For connecting the Z 111 power unit and battery charger to 4000 REPORT-S.

K 832 Adapter — For connecting a 2-pin loud-speaker plug to a 3-pin standard recorder socket.

W 211 Midget Magnetic Earphone — For monitoring the recording and playback.

W 911 Stethoclip — Converts a W211 earphone into a headset. For monitoring recordings.

F 111 Hand-Operated Remote Control — Start/stop operation.

F-211 Foot-Operated Remote Control — Start/stop operation.




A 261 Telephone Attachment — For connecting the recorder to a telephone set.

Z 161 6-Volt Automobile Battery Charger — For charging the storage battery of the 4000 REPORT-S from a 6-volt automobile battery.

Z 162 12-Volt Automobile Battery Charger — For charging the storage battery of the 4000 REPORT-S from a 12-volt automobile battery.

Z 211 "Dryfit" Storage Battery — Can be recharged by means of a Z 111 AC-operated power unit and battery charger or a Z 161 or Z 162 automobile battery charger.

FOR COMPLETE DETAILS AND DEMONSTRATION SEE

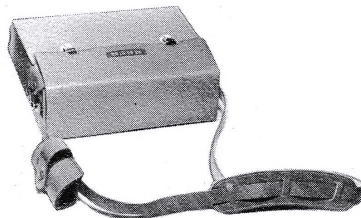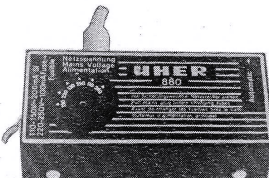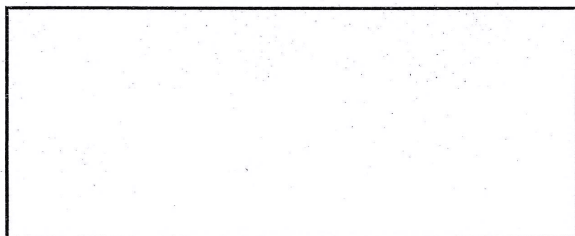

M 512 Dynamic Remote Control Microphone — Start/stop and speech/music switch, cardioid response. Particularly suitable for outdoor use due to its wind-screen. Frequency response 70-14,000 cps.

M 532 Dynamic Studio Microphone — High performance, wide-range model, cardioid response, continuously variable bass control, frequency response 40-16,000 cps.

F 411 Akustomat — acoustic switch for sound-controlled start and stop of the recorder from any signal source.

F 422 Dia-Pilot II — For controlling an automatic slide projector by means of signals recorded on the tape.

Z 111 AC-Operated Power Unit and Battery Charger — For operating the 4000 REPORT-S from the power line and charging the model Z 211 storage battery.

Z 511 Ever-Ready Carrying Case — Made of the best cow hide with shoulder strap, shoulder pad and microphone holder.

A 121 5-Channel Transistor Mixer — 5 individually adjustable channels, one direction control, each channel individually disconnectable.

Our complete line of audio equipment includes UHER multipurpose tape recorders, BLAUPUNKT Stereo Consoles and FM-AM Hi-Fi Radios for your home and automobile.

ROBERT BOSCH (CANADA) LTD.

33 ATOMIC AVE.,
TORONTO 18, ONT.

3429 PARK AVE.,
MONTREAL 18, QUE.